


General Notes:

1. All dimensions are in millimeters unless otherwise stated.
2. The front side of the SolBank3.0-LH housing the access doors must always have a clear 3500mm between the SolBank3.0-LH's surface and all obstructions for battery pack removal and maintenance spacing.
3. The left side of SolBank3.0-LH should keep no less than 2500mm for maintenance of the chiller. The right side of SolBank3.0-LH should keep no less than 1500mm for air exhaust distance, maintenance of the liquid cooling piping and safety channel distance.
4. All dimensions marked are the minimum dimensions.
5. Please refer to drawing M150, M170, M180 for container leveling and fixing.
6. The bottom four corner pieces of the container bearing surface is not less than 400mm * 400mm.

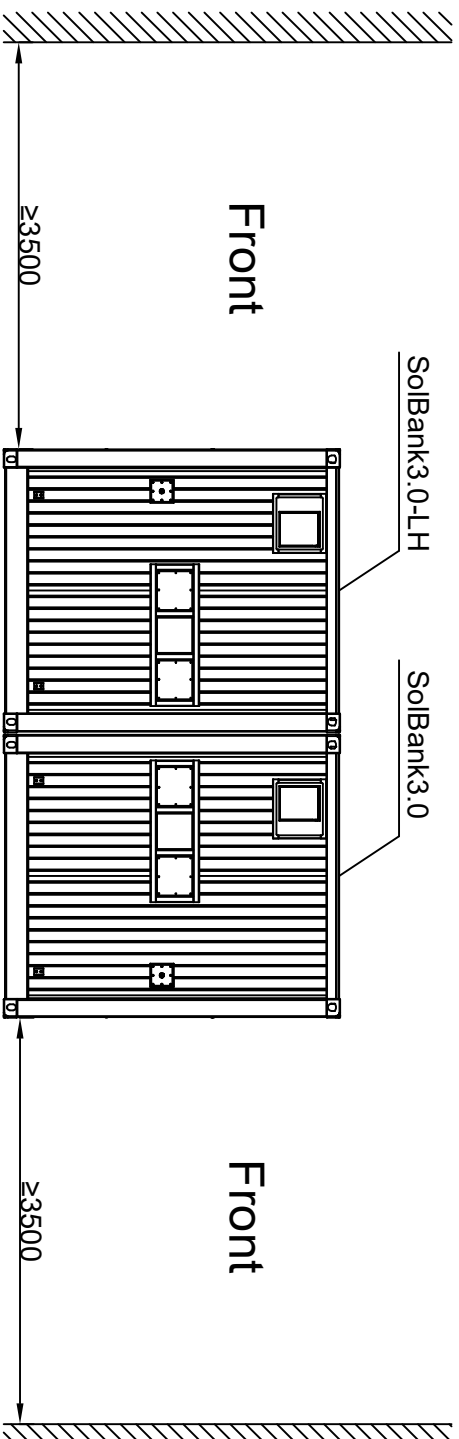

					CanadianSolar DRAWING NAME: Solbank comprehensive layout				
1	M110	Remove a frame reserved for ventilation fan	Jiale Ding	2024/12/19	DRAWING NO.: M110				
NO.	Original Drawing NO.	Change Description	signature	DATE					
DESIGNED BY	DATE	Standardizing			DATE				
CHECKED BY	DATE	APPROVED BY	DATE		PROJECT: SolBank3.0.0.26P-US-LH				
					PART NO.:				