

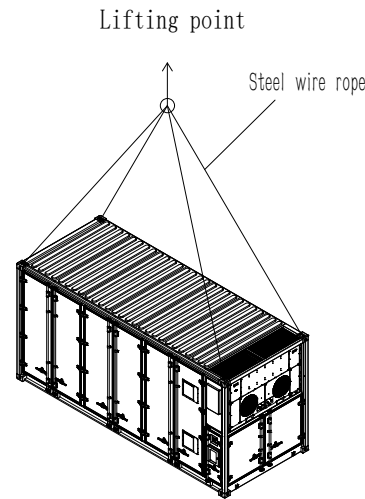
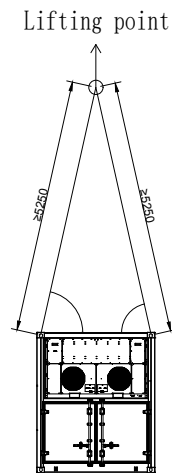
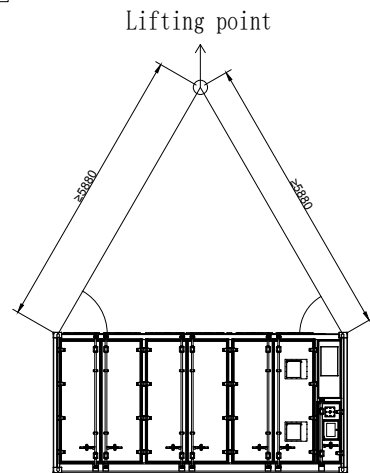
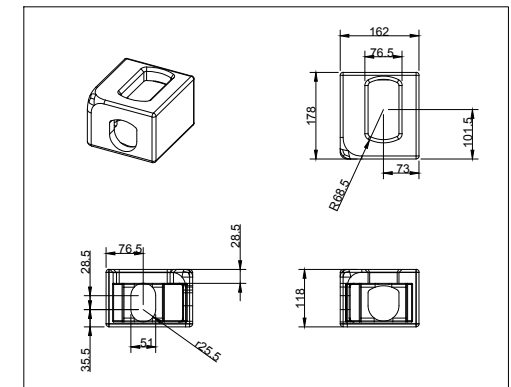
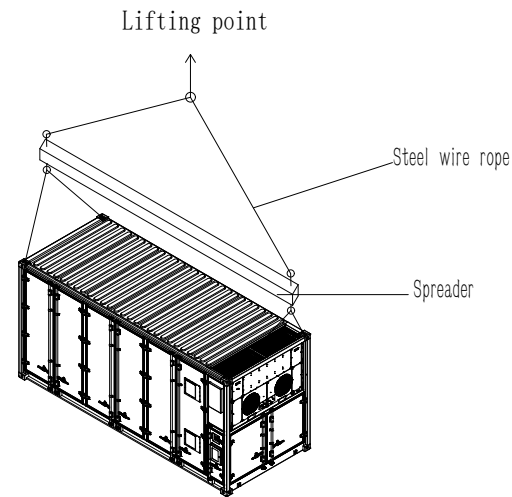


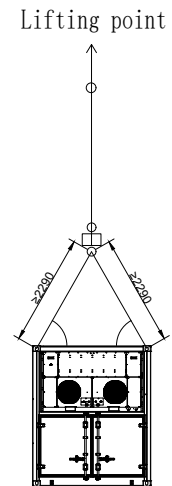

Lifting solution 1: Single hoist (no spreader) Single point lifting

Lifting instructions.

1. Container size specification: L6058mm*D2438mm*H2896mm;
2. Container weight: 43 ± 0.1 tons
3. Setting warning signs and warning marks in the lifting range.
4. Lifting equipment shall have a maintenance inspection certificate.
5. The lifting operator shall have received professional training and have an induction certificate.
6. Select the suitable hoisting machine and its auxiliary spreader to meet the lifting weight; when choosing the auxiliary spreader for lifting, the length L of the lifting wire rope and the lifting angle θ shall be determined according to the actual situation.
7. When lifting, make sure there is no obstacle around, and choose the suitable lifting plan according to the actual situation on site, lift gently and smoothly, do not scratch the container surface paint, and ensure safety during the whole process.

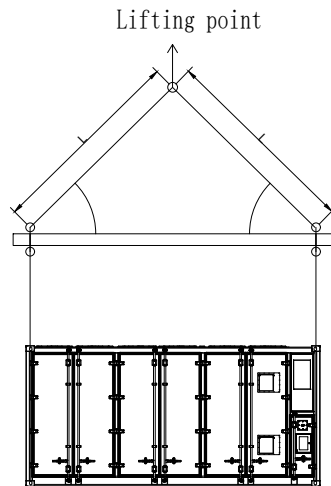

Container lifting corner pieces

Lifting solution 2: Single crane (with spreader) single point lifting

				CanadianSolar All rights reserved. No part of this document may be reproduced or transmitted in any form without the written permission of CSI.	DRAWING NAME: 20Ft SolBank Container Lifting Program			
NO.	Original Drawing NO.	Change Description	signature		DATE	DRAWING NO.: M180		
DESIGNED BY		DATE	Standardizing		DATE			
CHECKED BY		DATE	APPROVED BY		DATE			
REV.	PROJECTION ANGLE	UNIT	SCALE		PROJECT: SolBank3.0 0.25P-US			
A0		mm	1:1		PART NO.:			



All rights reserved. No part of this document may be reproduced or transmitted in any form without the written permission of CSI.