


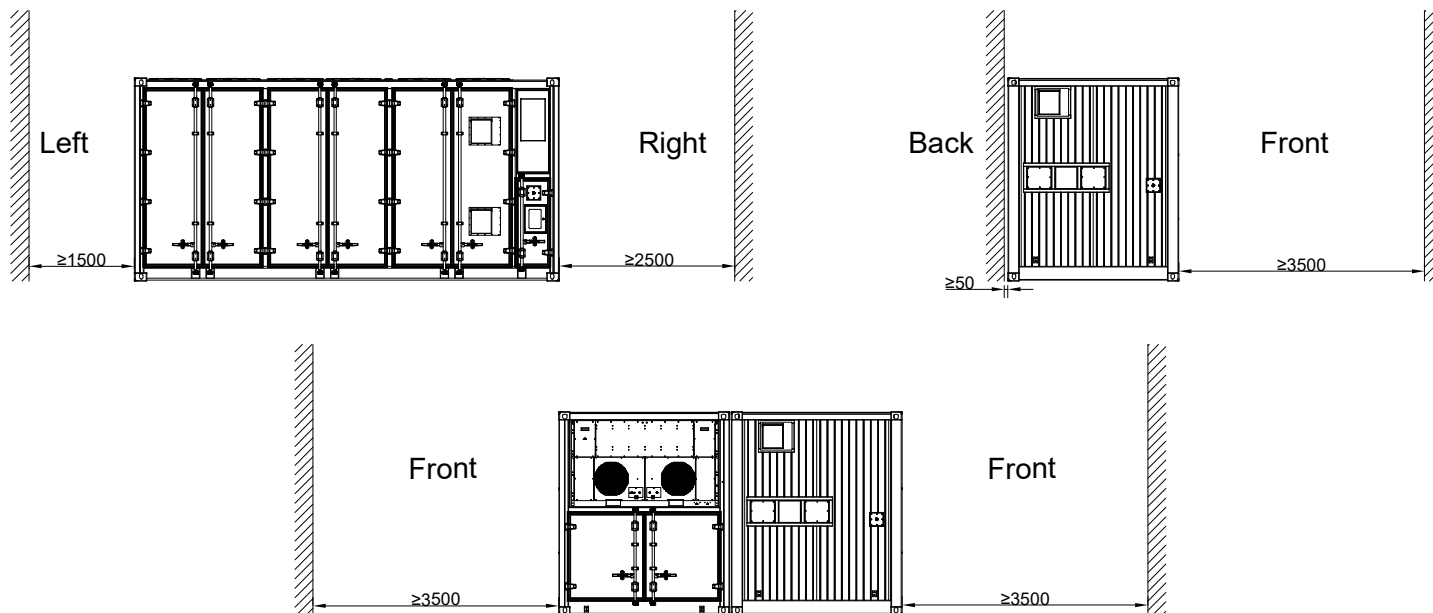

General Notes:

1. All dimensions are in millimeters unless otherwise stated.
2. The front side of the SolBank3.0 housing the access doors must always have a clear 3500mm between the SolBank3.0's surface and all obstructions for battery pack removal and maintenance spacing.
3. The left side of SolBank3.0 should keep no less than 1500mm for air exhaust distance, maintenance of the liquid cooling piping and safety channel distance. The right side of SolBank3.0 should keep no less than 2500mm for maintenance of the chiller.
4. All dimensions marked are the minimum dimensions.
5. Please refer to drawing M150, M170, M180 for container leveling and fixing.
6. The bottom four corner pieces of the container bearing surface is not less than 400mm * 400mm.

3	A2	Remove a frame reserved for ventilation fan	Stephen	2025/02/17
2	A1	Change the access location and size of enclosure to the left side of the container	Stephen	2024/09/22
1	A0	Change the layout presentation	Stephen	2024/05/31
NO.	Original Drawing NO.	Change Description	signature	DATE
DESIGNED BY	DATE	Standardizing	DATE	
CHECKED BY	DATE	APPROVED BY	DATE	



All rights reserved. No part of this document may be reproduced or transmitted in any form without the written permission of CSI.

REV.	PROJECTION ANGLE	UNIT	SCALE
A3		mm	1:1

DRAWING NAME:
Solbank comprehensive layout

DRAWING NO.:
M110

PROJECT:
SolBank3.0 0.25P-US

PART NO.: