

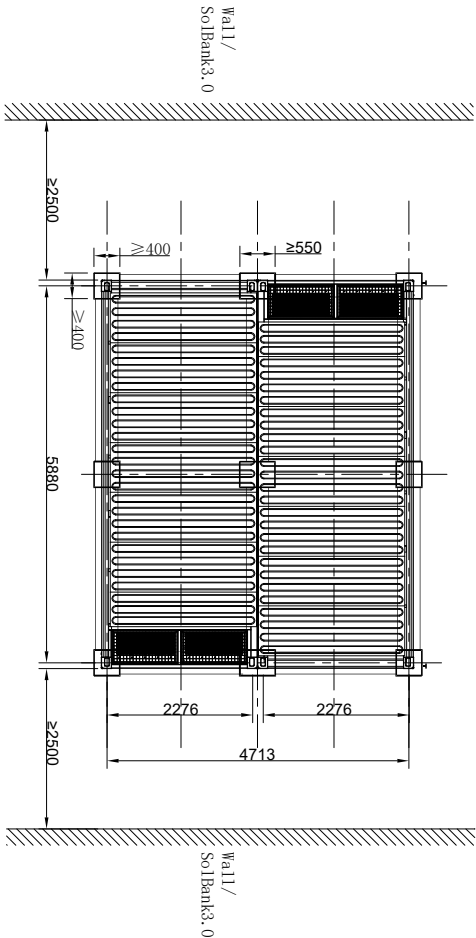


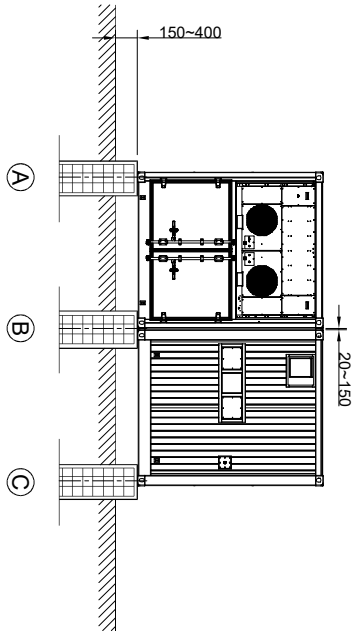

- General Notes:**
1. All dimensions are in millimeters unless otherwise stated.
 2. The bottom of the box needs to be kept 150mm spacing from the ground to to allow pack removal/install in the field. And the maximum clearance from the bottom to the ground is 400mm for F-STOP operating height.
 3. The bottom surfaces of the four corner pieces of the SolBank3.0 must be in complete contact with the support surface, without any racking, to avoid tipping due to uneven forces.
 4. When SolBank3.0 units are placed side by side, they must maintain a minimum clearance of over 2500mm between them to accommodate emergency stop buttons, maintenance and operating procedures.

4	A2	Revision 4: Remove manufacturer's logo	Stephen	2006/05/17
3	A2	Change top ground distance to 150mm	Stephen	2006/05/17
2	A1	Change top ground distance to 150mm	Stephen	2006/05/17
1	A0	Change top ground distance to 150mm	Stephen	2006/05/17
NO	Original Drawing NO	Change Description	Signature	DATE
DESIGNED BY	DATE	Standardizing	DATE	
CHECKED BY	DATE	APPROVED BY	DATE	

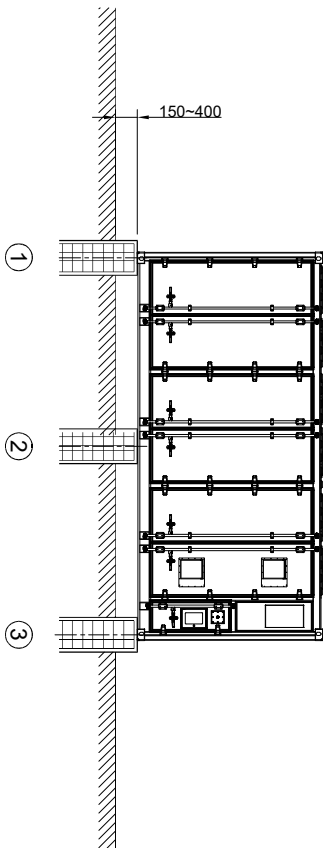

All rights reserved. No part of the document may be reproduced or transmitted in any form without the written permission of CSI.

DRAWING NAME:	Solbank back-to-back arrangement diagram
DRAWING NO.:	M140

REV.	ANGLE	UNIT	SCALE	PROJECT
A4	mm	1:1		SolBank3.0.25P-US
PART NO.:				